

ENGINEERING SPECIFICATIONS


Document Name: Procedure for adding new devices on website.		
Document No: ESP-21-22-003	Revision: 00	Date:14/09/2021
Prepared By: CGH	Approved By: RDT	Sheet: Page 1 of 6

Refer the Installation procedure for K-Connect as per installation manual which is provided separately....

After installing the new devices it is mandatory to check the data communication and adding the installed device on the website for the same refer the below procedure.

For your quick reference below connection diagram should be referred for installation of K-Connect.

J25 BMS2 port or BMS1 serial card port can be used for connecting the new device as per availability.

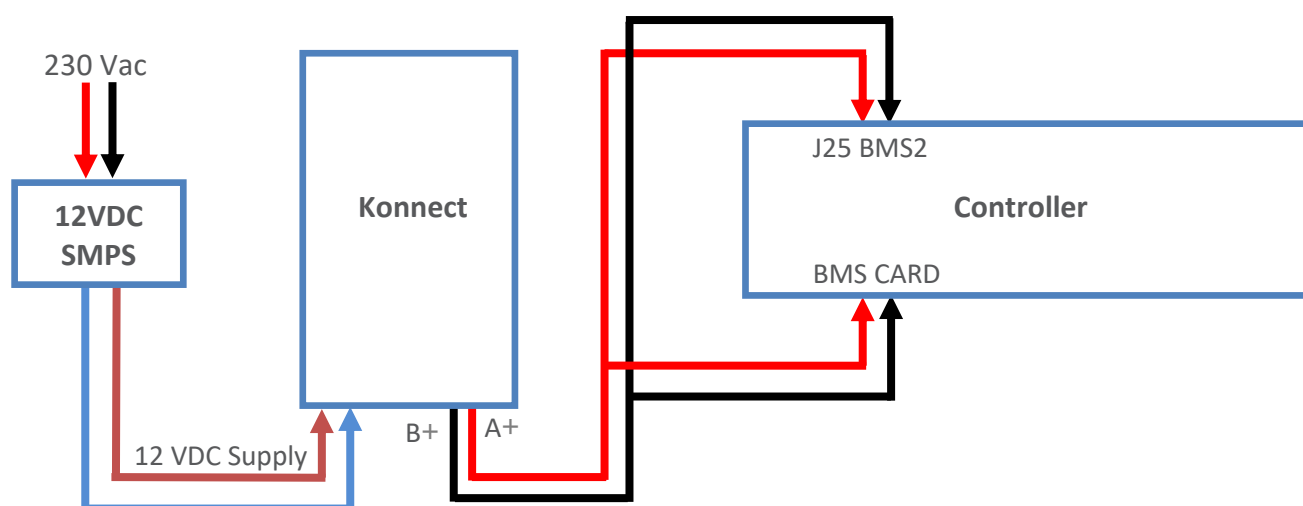


After completing the installation, power up the device & check the data communication on the website.

To test device data refer below procedure.

- **Step 1** – Click on this link <http://konnnect.kirloskarchillers.com/>
- **Step 2** – Enter below username & password.

User Name – TESTDEVICE


Password – TESTDEVICE123

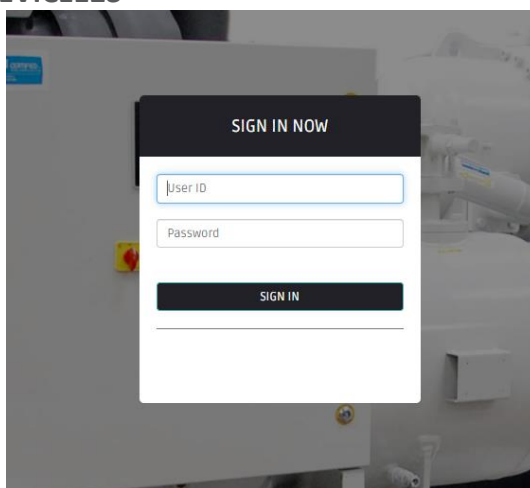


ENGINEERING SPECIFICATIONS

Document Name: Procedure for adding new devices on website.		
Document No: ESP-21-22-003	Revision: 00	Date:14/09/2021
Prepared By: CGH	Approved By: RDT	Sheet: Page 2 of 6

- **Step 3** – Once Logged ON enter the installed device ID to check the data by clicking view button. If some error window appears then refer step 5.

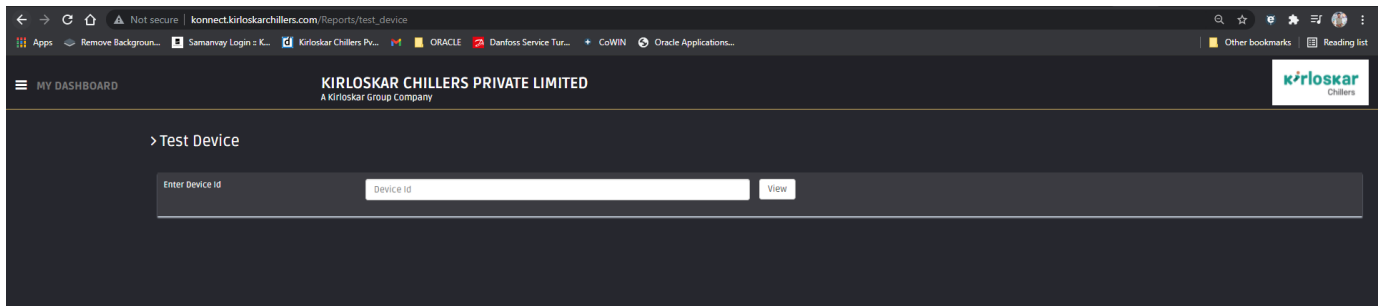

- **Step 4** - Verify device data here, if ok then proceed further.

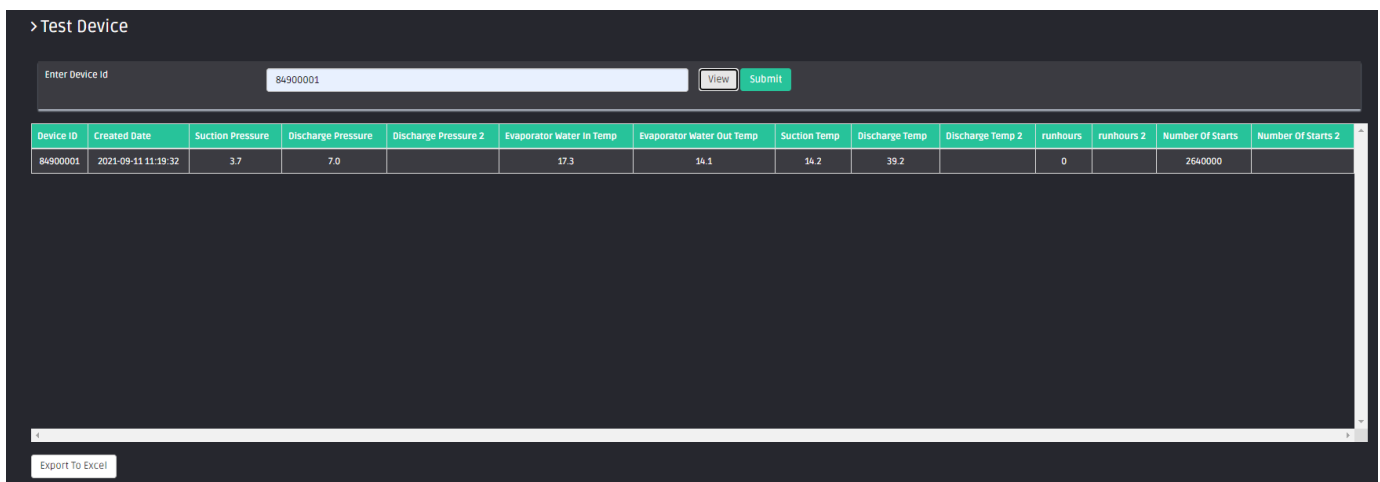

If data shown on the web site & on chillers display is having some difference or not matching then check BMS setting.

Refer below table for BMS setting verification.


Port Used For Konnect	If J25 BMS2 Port Used	If BMS card Port Used
Address	2	
Protocol	Modbus Extended	Modbus
Baud rate	19200	

After above communication setting, Re-verify device data shown on web site if ok then proceed further.

ENGINEERING SPECIFICATIONS

Document Name: Procedure for adding new devices on website.		
Document No: ESP-21-22-003	Revision: 00	Date:14/09/2021
Prepared By: CGH	Approved By: RDT	Sheet: Page 3 of 6

- **Step 5** -If you observe the pop-up “error” window as shown below, then follow the instruction to rectify the error.

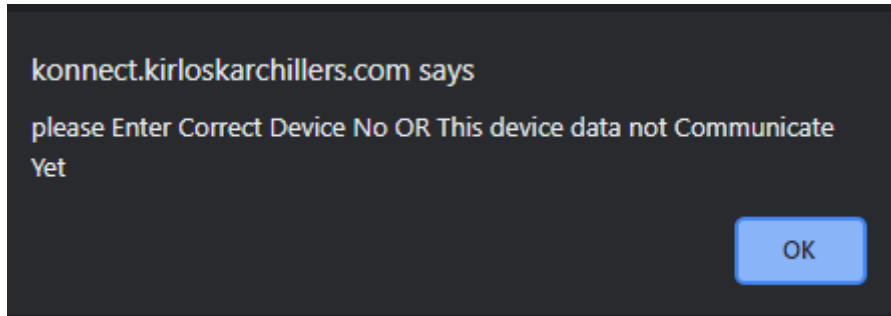

- ✓ Check LED indication for network connectivity & ensure the device is powered ON.
- ✓ Check correct device ID & protocol is entered while updating the device firmware.
- ✓ Check communication wiring connection.
- ✓ Check Mod scan on same port. (Separate manual for Mod Scan is provided).

After resolving the issue go back to step 3 again.

ENGINEERING SPECIFICATIONS

Document Name: Procedure for adding new devices on website.		
Document No: ESP-21-22-003	Revision: 00	Date:14/09/2021
Prepared By: CGH	Approved By: RDT	Sheet: Page 4 of 6

- **Step 6** – Now you have to enter the master data to add this device on website.
Enter all the required or asked information before creating the profile.
Refer the images where the master data can be filled.

Master Details

Product Id

KRM No

Application Code

Serial No

Model No

Commissioning Date

Install Date

Warranty Expiry Date

Customer Details

Customer Name

Customer Address

City

Email Id

Contact No

Service Engineer

SIM No

Select Zone


Select TSE

ENGINEERING SPECIFICATIONS

Document Name: Procedure for adding new devices on website.		
Document No: ESP-21-22-003	Revision: 00	Date:14/09/2021
Prepared By: CGH	Approved By: RDT	Sheet: Page 5 of 6

- **Step 7** – After creating the profile, check whether the device is added on the website and is visible under the your region.

Verify all parameters on website with the actual chiller parameters and leave the site only if all parameters found ok.

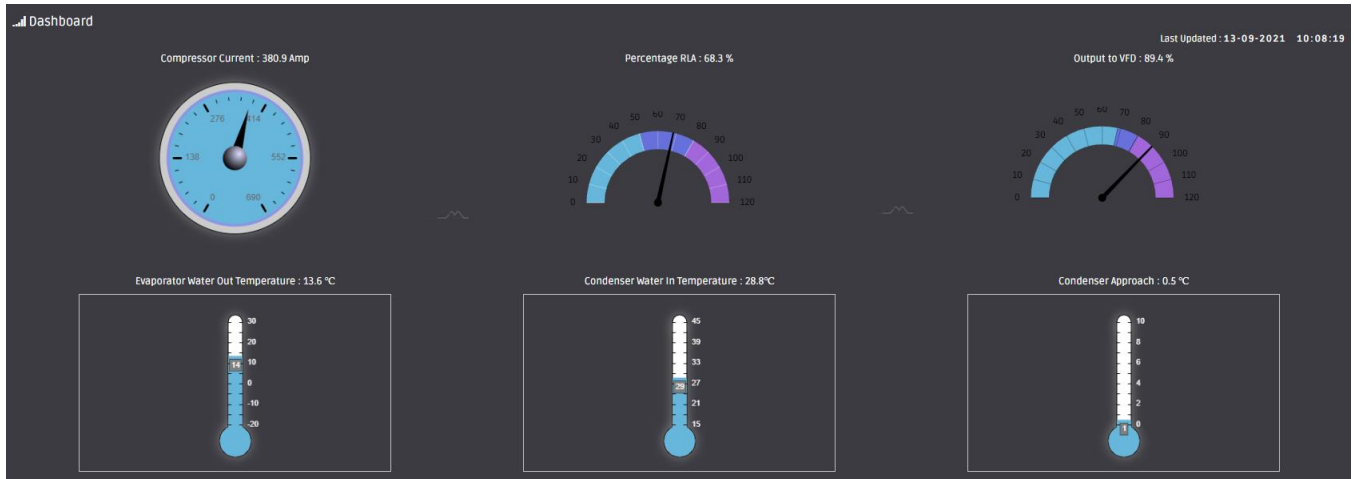

ENGINEERING SPECIFICATIONS

Document Name: Procedure for adding new devices on website.		
Document No: ESP-21-22-003	Revision: 00	Date:14/09/2021
Prepared By: CGH	Approved By: RDT	Sheet: Page 6 of 6

Favourites	Parameter	Value	Unit
☆	Suction Pressure	2.0	bar
☆	Suction Temperature	1.3	°C
☆	Compressor Current	175.2	Amp
☆	Oil Pressure	7.5	bar
☆	Condenser Water In Temperature	25.0	°C
☆	Condenser Water Out Temperature	27.7	°C
☆	Evaporator Water In Temperature	9.7	°C
☆	Evaporator Water Out Temperature	6.7	°C
☆	Discharge Pressure	7.4	bar
☆	Discharge Temperature	43.8	°C
☆	Percentage RLA	64.2	%
☆	Lift Temperature	42.5	°C
☆	Lift Pressure	5.4	bar
☆	Runhours	16397	Hrs
☆	Number Of Starts	4930	
☆	Hours Since Last Start	25	
☆	Chiller On Switch	ON	
☆	Compressor Status	ON	
☆	Oil Pump Status	ON	
☆	Oil Heater Status	OFF	
☆	Sump Oil Temperature Status	ON	
☆	Evaporator Flow Switch	ON	
☆	Condenser Flow Switch	ON	
☆	Evaporator Delta T	3.0	°C
☆	Suction Saturation Temperature	1.1	°C
☆	Suction Superheat	0.2	°C
☆	Approach Evaporator	5.6	°C
☆	Evaporator Flow	0.00	°C
☆	Anti Freeze Switch	OFF	
☆	LP Switch	OFF	
☆	Condenser Delta T	2.7	°C
☆	Discharge Saturation Temperature	33.1	°C
☆	Discharge Superheat	10.7	°C
☆	Approach Condenser	5.4	°C
☆	Liquid Temperature	32.2	°C
☆	Condenser Flow	0.00	°C
☆	HP Switch	OFF	
☆	Oil Feed Temperature	40.00	°C
☆	Oil Feed Pressure	9.40	bar
☆	Oil Vent Pressure	1.90	bar
☆	Oil Sump Temperature	56.00	°C
☆	Starter Healthy Status	Healthy	
☆	Starter Run Status	ON	
☆	Winding Protection Status	ON	
☆	Voltage Protection Status	ON	
☆	Oil Differential Status	OFF	
☆	Vane Fully Closed Status	ON	
☆	Vane Fully Opened Status	ON	
☆	Output To EXV	42.3	%
☆	Output To Oil Cooler EXV	64.00	%
☆	Lift For VFD	23.00	%
☆	Minimum Set Speed	70.00	
☆	Minimum Required Speed	98.60	
☆	Designed Condition Lift	22.30	
☆	Output To VFD	98.4	%